

Teddy

SITS



Teddy

UPHOLSTERY



fabric

COMFORTS



standard




lux

COVERS




fixed




loose
with velcro


SPECIAL




modular system

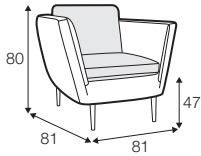


armchair

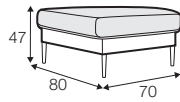


footstool 80x70

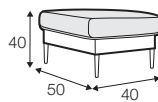


footstool 50x40
only for armchair

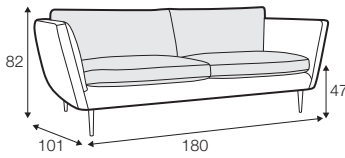


2 seater

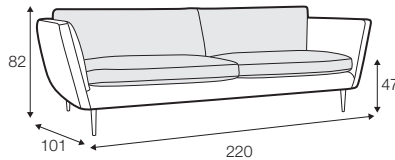


3 seater

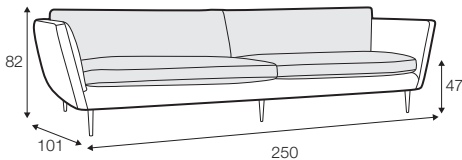

4 seater divided with two cushions

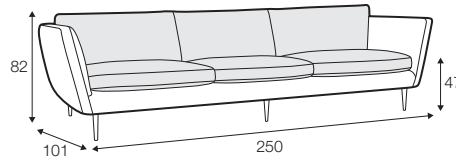


4 seater divided

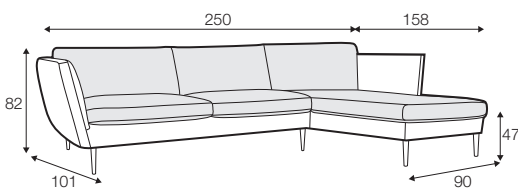


set 1 right / or left

2 seater left / or right + chaiselongue right / or left

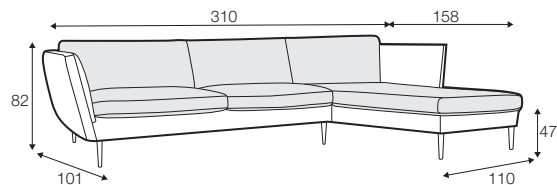


set 2 right / or left

3 seater left / or right + chaiselongue wide right / or left

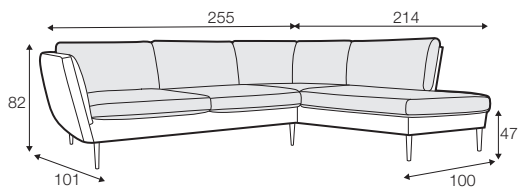


set 3 right / or left

2 seater left / or right + divan right / or left

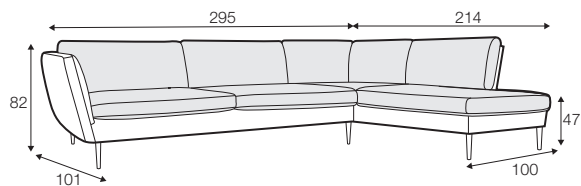


set 4 right / or left

3 seater left / or right + divan right / or left

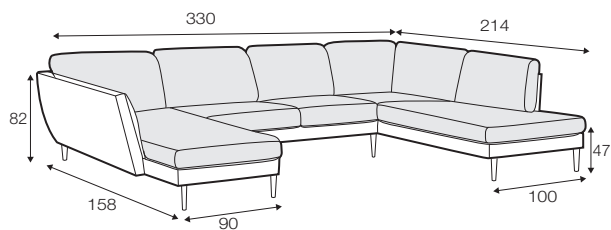


set 5 right / or left
chaiselongue left / or right + 2 seater without armrests
+ divan right/or left

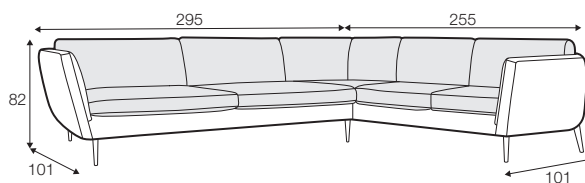


set 6 right / or left
3 seater left / or right + corner 90° + 2 seater right / or left


elements of the modular system

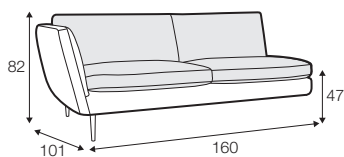


2 seater left / or right

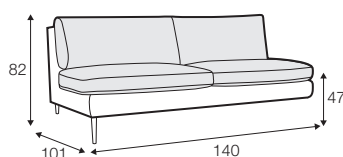


2 seater without armrests

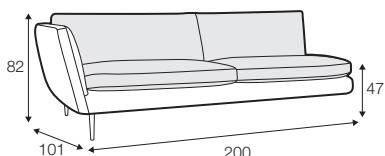


3 seater left / or right

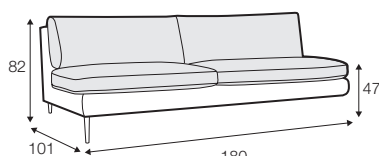


3 seater without armrests

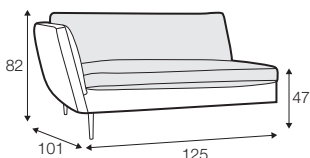


element 125 left / or right

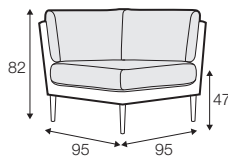


corner 90°

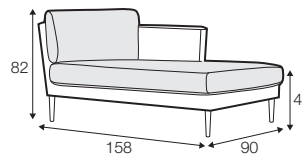

chaiselongue right / or left

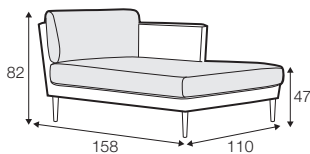


chaiselongue wide right / or left

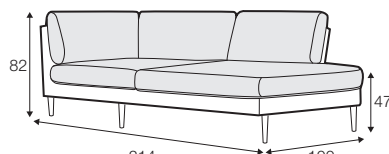


divan right / or left

extra dimensions

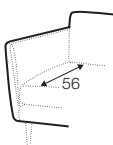


depth of sofas


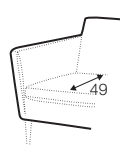


depth of armchair


accessories

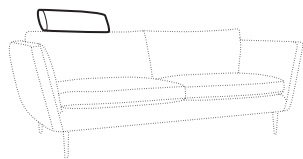



headrest L-62

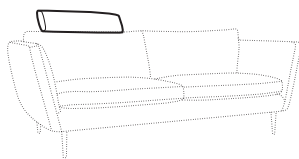

headrest L-77




endpart left / or right

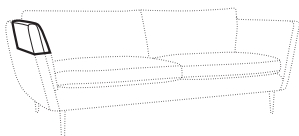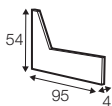


armrest protection

legs

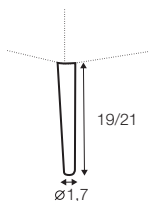

no. 186
wood

sofas H-19
footstool for armchair H-19
armchair: front H-21 back H-19
corner, divan: H-19

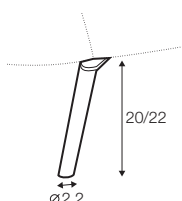

no. 160
metal chrome,
painted black or grey
and brushed steel

sofas H-20
footstool for armchair H-20
armchair: front H-22 back H-20
divan: front H-20 back 160A H-20
corner 160A H-20